



Application Bulletin

000-1300 REV. D

MODEL 1250 Quick Reference Programming Guide

NOTE: This guide is intended as a quick reference to programming the INCON Model 1250 Programmable Position Monitor. It is intended as a supplement to the Installation and Programming Manual. Be certain to review the manual and thoroughly familiarize yourself with programming details before attempting to program the device.

<u>TO:</u>	<u>DO THIS:</u>
1. ACCESS THE MENU	Hold in the MENU key until display goes blank; then press SELECT/ENTER within four seconds.
2. SCROLL THROUGH THE MENU	Press UP ARROW or DOWN ARROW key.
3. ACCESS A PARTICULAR OPTION	Scroll to the desired option; then press SELECT/ENTER . Menu options are of three types: Function, Condition Toggle, and Variable Entry. Variable Entry options are of two types: Integer and Decimal.
4. EXECUTE A FUNCTION OPTION	When the desired option is accessed (see #3 above), the 1250 displays a confirming identifier or "prompt". Press SELECT/ENTER to execute the function or MENU to return to the menu without executing the function.
5. CHANGE A CONDITION TOGGLE OPTION	When the desired option is accessed (see #3 above), the 1250 will display the current setting of the toggle (ON or OFF). Press MENU at any time to return to the menu without changing the toggle condition. Use the UP or DOWN ARROW keys to change the condition to ON or OFF . Press SELECT/ENTER key to enter the chosen condition into memory.
6. ENTER AN INTEGER VARIABLE	When the desired option is accessed (see #3 above), the 1250 displays the currently programmed value of that option. Press MENU at any time to return to the menu without changing the value. To enter a new value, use the UP ARROW or DOWN ARROW key to scroll up or down through the available values. Then press SELECT/ENTER when the desired value is displayed.

7. ENTER A DECIMAL VARIABLE	When the desired option is accessed (see #3 above), the 1250 displays the mantissa of the currently programmed value (current value without the decimal point displayed). With the first digit flashing, press MENU at any time to return to the menu without changing this value. To enter a new value, use the UP ARROW OR DOWN ARROW key to change the digit. Press the SELECT/ENTER key to select the next digit. After all digits have been set, the decimal point will appear. Use the UP ARROW key to move the decimal point to the right, or the DOWN ARROW key to move the decimal point to the left. Press the SELECT/ENTER key to store the decimal point position. The display will read "POS" or "Neg", indicating that the value is a positive or negative number. Press the UP or DOWN ARROW keys to change the sign ("Neg" or "POS"). Press SELECT/ENTER key to store the value and return to the menu.
8. GO TO THE RUN STATE FROM THE PROGRAM STATE	Scroll to Menu Option #0 and press SELECT/ENTER . The display will show RUN. Press SELECT/ENTER again.

MENU OPTION SUMMARY (Operating Modes Only)

<u>Option#</u>	<u>Description</u>	<u>Option#</u>	<u>Description</u>
BASIC OPTIONS		SETUP OPTIONS	
0	Enter RUN state	50	Display Sleep Mode ON/OFF
2	Set Operating Mode	53	"FA25" Auto Reset ON/OFF
SCALED MODE		SEGMENTED MODE	
3	Set Counts per Turn	20	Set Number of Segments
4	Set Left Digits	21	Set Degrees Per Segment
5	Set Analog Minimum Position	22	Set Number of Neutrals
6	Set Analog Maximum Position	23	Set Neutral Start Segment
17	Set Preset	27	Set Preset program
18	Load Preset	28	Load preset
19	Clear preset		